


# ***No Hydraulic Pressure Glas-Craft Hydraulic Machines***

***1- Remove valve assembly  
from machine***

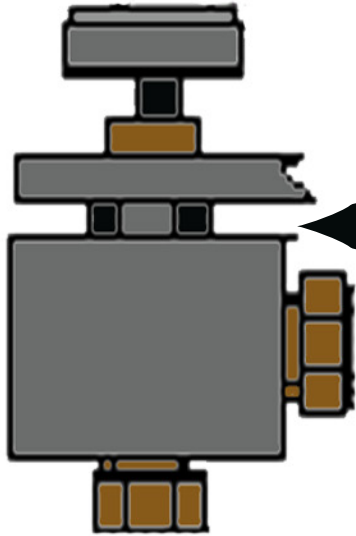

***2- Remove the valve  
from the block***

***3- Look for debris in holes  
that may be stopping the  
plunger from returning to  
the top of valve holes. You  
may need to carefully push down  
on the plunger to release  
the blockage.***

***4- Reassemble and reset hydraulic pressure***

***Spring Loaded  
Plunger***

