


## Extra Capacity Lube Reservoir For Super-Maxi & MH-II

You can increase the Solvent cap or Lube reservoir by adding a 2" piece of 1 3/4" hose and a simple hose clamp. First remove shaft nut at the top of the pump shaft (Item A) on the A-side pump from the Saddle Pump. Slide 2" piece of 1 3/4" hose (Item C) over the Solvent Cup Adapter (Item B). Install hose clamp (Item D) so that screw portion of the clamp will not interfere with anything on the machine. Reinstall pump shaft into the Saddle Pump and reinstall the nut to the top of the pump shaft. Fill with DOP PUMP LUBE.

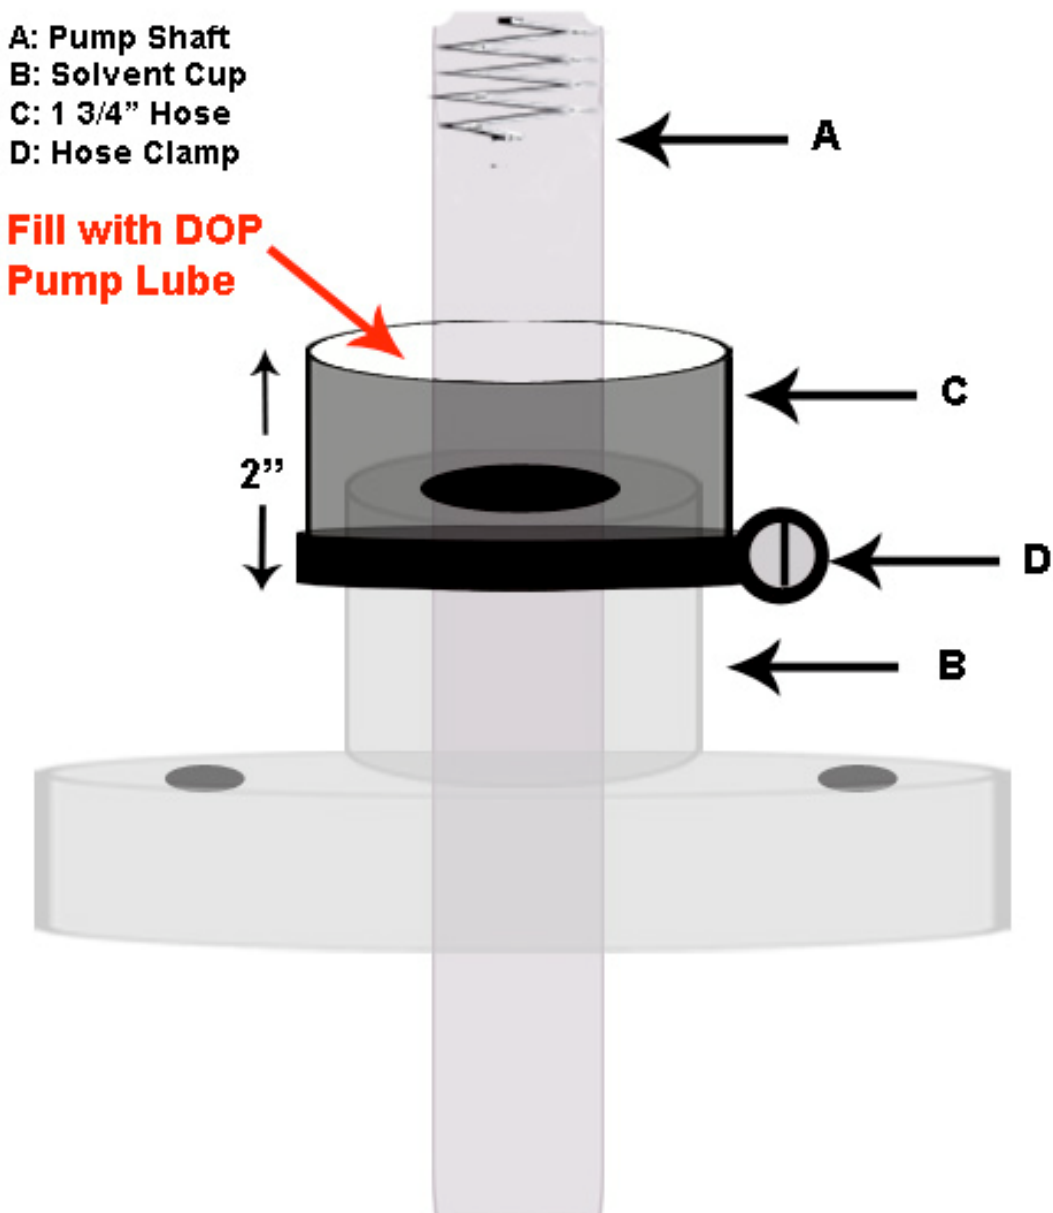

Turbo Liner Inc.  
1 West Cameron  
Kellogg, ID 83837  
Ph: 877-678-8726

Tech Fax:

208-786-7506

Acct Fax:

208-786-0308

E-Mail:

Tech & Parts:

[vinces@turboliner.com](mailto:vinces@turboliner.com)

[markp@turboliner.com](mailto:markp@turboliner.com)

[johnp@turboliner.com](mailto:johnp@turboliner.com)

Accounting:

[rayf@turboliner.com](mailto:rayf@turboliner.com)

[clairem@turboliner.com](mailto:clairem@turboliner.com)

[carons@turboliner.com](mailto:carons@turboliner.com)